

# SCOUT

## Quick Start Guide

431-TS00-00-QS Rev. 100



**Power Button** – The Scout has 3 power modes: On, Off, and Standby.

- On – Press the Power button to turn the Scout on. Startup takes approximately 90 seconds, during which there is a fast-flashing red LED on the eyepiece display.
- Standby - After the camera is on, pressing the Power button again will put the camera in Standby mode, during which there is a slow-flashing red LED on the eyepiece display.
- Off - Push and hold the power button for approximately 8 seconds to turn Scout off; a shutdown timer will be shown on the display.

**Capture Button\*** – Capture still images by pressing and releasing the Capture button. Capture video clips by pressing and holding the Capture button. Images and video are saved to the SD card.

**Display Brightness** – Adjusts the brightness of the Scout's eyepiece display.

**White/Black Hot/Instalert™** – In White Hot mode, hotter items appear as white or light grey. In the Black Hot mode, hotter items appear as black or dark grey. In the Instalert mode, the hottest objects and/or surfaces are highlighted **RED** with varying intensity via four user-selectable levels.

**2x Zoom\*** – When enabled, causes the image to zoom to 2x.

**Diopter Controls** – The diopter adjustment knob allows a  $\pm 2$  diopter range.

This document is controlled to FLIR Technology Level EAR 1. The information contained in this document is proprietary and/or restricted and pertains to a dual use product controlled for export by the Export Administration Regulations (EAR). This document and data disclosed herein or herewith is not to be reproduced, used, or disclosed in whole or in part to anyone without the written permission of FLIR Systems, Inc. Diversion contrary to US law is prohibited. US Department of Commerce authorization is not required prior to export or transfer to foreign persons, parties, or uses otherwise prohibited.

\* – Enabled on Pro Models only

## Installing the Batteries and SD Card

The batteries must be installed and charged before using your camera. Install your SD card.

1. Remove the small SD card cover by pinching the tabs towards the center of the camera and lifting the cover off. No tools are required.
2. Install the SD card.
3. Loosen the four captive screws securing the battery cover.
4. Remove the battery cover by grasping its front edge, which was exposed by removing the SD card cover.
5. Install the batteries as shown.



6. Re-install the battery cover, tighten the screws, and snap the SD card cover firmly into place to ensure it is down and sealed.

**Battery cover**



**Grasp SD card cover edges and pull**



## Charging the Camera

The batteries in the camera must be fully charged prior to their first use.

1. Connect the Hot Shoe to your camera, by aligning the screw with threads, and pins with pads; tighten with the thumb wheel.
2. Ensure that the plug is fully seated in the Hot Shoe.

When charging correctly, the charging indicator will glow yellow and blink green for one second within about 35 seconds.

The charging indicator will continue to blink at decreasing intervals until the batteries are fully charged. When fully charged, the charging indicator will glow steady green.

The initial charge time is approximately 4 hours.

**Power adapter plug**



**Charging indicator**



**Steady green**

Always consult federal, state and local laws associated with fishing, hunting and shooting sports prior to the use of a thermal or infrared viewer/camera to ensure full compliance with appropriate regulations governing sportsman use. State and local laws vary by state and can change on regular basis. It is the user/purchaser's responsibility to use the product in conformity with state laws and regulations in the state where operated.



[www.flir.com](http://www.flir.com)

