


# BHM-Series Bi-Ocular Quick Start Guide

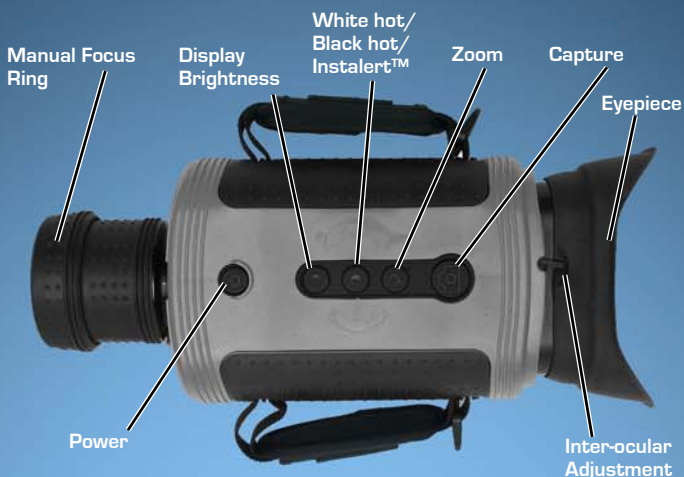

**Power Button** – The BHM-Series Bi-Ocular camera has 3 power modes: On, Off, and Standby.

- On - Takes approximately 90 seconds (during bootup there is a fast-flashing red LED on the eyepiece display).
- Standby - After the camera is on, pressing the Power button will toggle the camera between On and Standby mode. (In Standby there is a slow-flashing red LED on the eyepiece display.)
- Off - Push and hold the power button for 8 sec. to turn off.

**Capture Button** – Takes snapshots (press and release) or video clips (press and hold 3 seconds to start video recording). The files are stored on the integrated SD card.

**Display Brightness** – Toggle through five brightness settings.

**White/Black Hot/Instalert** – In White Hot mode, hotter items appear as white or light grey. In Black Hot, hotter items appear as black or dark grey. In Instalert, hotter items in a scene are highlighted in red.

**Zoom** –When enabled, causes the image to zoom to 2X.

**Inter-ocular Adjustment** – The lever allows you to adjust the distance between the two eyepiece displays for the most comfortable viewing.




This document is controlled to FLIR Technology Level 1. The information contained in this document pertains to a defense article controlled for export by the International Traffic in Arms Regulations (ITAR). FLIR trade secrets contained herein are subject to disclosure restrictions as a matter of law. Diversion contrary to US law is prohibited. US Government authorization for public release has been obtained from the Office of Security Review, authorization No. 13-S-0993. Additional US Department of State authorization is not required prior to export or transfer to foreign persons or parties, unless otherwise prohibited.

# Installing the Batteries and SD Card

The batteries must be installed and charged before using your camera.

1. Remove the SD card door. No tools are required.
2. Install the SD card into card slot with label facing the front of the camera.

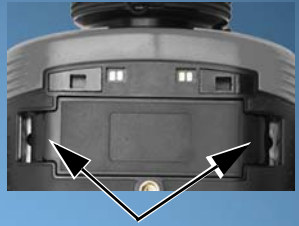


Grasp spring loaded buttons on SD card door edges and pull

3. Pull off the battery cover by lifting the latch as shown at the right.
4. Install the batteries as shown.



Battery cover latch

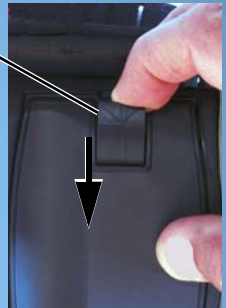

5. Snap the SD card door back into place and re-install the battery cover—it only fits one way.

## Charging the Camera

The batteries in the camera must be charged prior to first use.

1. Connect the Hot Shoe to your camera.
2. Ensure that the plug is fully seated in the Hot Shoe.

When charging correctly, the charging indicator will be lit yellow and will blink green for one second within about 35 seconds.

The charging indicator will continue to blink at decreasing intervals until the batteries are fully charged.

When fully charged, the charging indicator will be lit solid green. The initial charge time is approximately 4 hours.

Plug from power adapter

Charging indicator



Solid green

