

How To: Locate a component serial number

Quick reference guide for component serial number locations.

18-Apr-2018.Knowledge

ENVIRONMENT

All SkyRanger systems

OBSERVATION

Each of the components listed below has a white label that contains the serial number.

Note: There may be more than one label, but the serial number is the one that follows the relevant serial number format below.

HOW TO

Component type	Label location	Serial number format
Aircraft body	Remove the protective panel. The label is in the payload bay, above the SD reader.	SR#####
Arm – 1-pin, black	On the end by the latch	AB#####
Arm – 1-pin, white	On the end by the latch	AW#####
Arm – 3-pin, black	On the end by the latch	VB#####
Arm – 3-pin, white	On the end by the latch	VB#####
Base station	Remove the battery from the base station. The label is in the battery bay, to the right of the battery pins.	BS#####
Battery	Battery bottom	SN#####
Battery charger	Open the case. The label is inside on the instruction panel.	CR#####
Battery diverter	Battery diverter bottom	SN#####
EO	Camera bottom (flat part)	EO#####
EO/IR	Camera bottom (flat part)	IR#####
EO/IR Mk II	Camera bottom (flat part)	I#####
GoBox	Case bottom	#####
HDZoom + Vector	Camera bottom (flat part)	HV#####
HDZoom	Camera bottom (flat part)	HZ#####
Programmable payload	Payload bottom	PG#####

Leg with antenna	Under the antenna, near the foot of the leg	SN#####
Tablet	Tablet back	TB#####