



# FLIR EX Series

## Point-and-Shoot Thermal Imaging Cameras

FLIR E4, E5, E6, and E8 infrared cameras are powerful and extremely cost-effective, easy-to-use troubleshooting tools for building, electrical, and mechanical applications. Four resolution options are available (ranging from 80 x 60 IR pixels to 320 x 240) to fit the target size, working distance, and detail you require. All include MSX® technology that provides extraordinary thermal imaging detail. Wi-Fi connectivity to smartphones and tablets via the FLIR Tools Mobile app makes sharing images and sending reports from any location easier, enabling you to make critical decisions faster. By providing thermal images to help you find hidden problems along with accurate temperature measurements, an Ex-Series camera is the ideal budget-friendly replacement for old-school IR thermometers.

### Easy to use

*Intuitive, user-friendly interface for measurements in thermal or MSX mode*

- Fully automatic and focus-free
- Simple button navigation to on-screen settings, imaging modes, and measurement tools
- MSX adds digital camera detail to IR images for better perspective and interpretation

### Conveniently share images and findings


*Download images, create reports, and show what you've found instantly*

- Wi-Fi connectivity to mobile devices via FLIR Tools Mobile app
- Rapid Wi-Fi or USB image transfer for documentation
- Analyze and edit images, and create convincing reports with FLIR Tools


### Compact and rugged

*Built for portability and use in harsh environments*

- Lightweight (1.2 lb / 0.575kg) and withstands 2-meter drop test
- Hard transport case included for convenience on-the-go
- 2-year warranty coverage on camera, 5 years on batteries, 10 years on detector

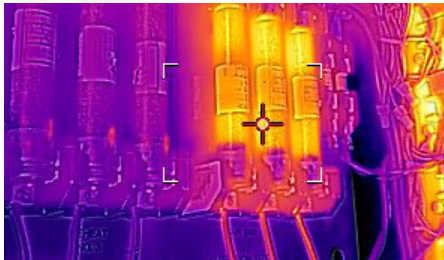

MSX shows you numbers, labels and structural features, eliminating the need to look at a visual image for detail

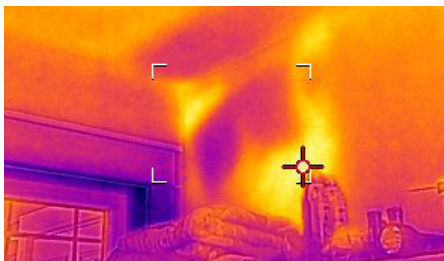

See temperature patterns showing insulation voids and other building issues

## Specifications

Features by Camera	E4	E5	E6	E8
IR resolution	80 × 60 pixels	120 × 90 pixels	160 × 120 pixels	320 × 240 pixels
Thermal sensitivity/NETD	<0.15°C (0.27°F) / <150 mK	<0.10°C (0.27°F) / <100 mK	<0.06°C (0.11°F) / <60 mK	
Image adjustment	Automatic adjust/lock image		Automatic/Manual	
<b>Common Features</b>				
Field of view (FOV)	45° × 34°			
Minimum focus distance	0.5 m (1.6 ft.)			
Image frequency	9 Hz			
Focus	Focus free			
Wi-Fi	Peer-to-peer or network			
Detector type	Uncooled microbolometer			
<b>Image Presentation and Modes</b>				
Display	3.0 in. 320 × 240 color LCD			
Image modes	Thermal MSX®, thermal, picture-in-picture, thermal blending, digital camera			
Multi Spectral Dynamic Imaging (MSX)	IR image enhanced with visible camera detail			
Picture in Picture	IR area on visual image			
Color palettes	Black & white, iron, and rainbow			
Digital camera resolution/FOV	640 × 480/55° × 43°			
<b>Measurement Features</b>				
Object temperature range	-20°C to +250°C (-4°F to +482°F)			
Accuracy	±2°C (±3.6°F) or ±2% of reading, for ambient temperature 10°C to 35°C (+50°F to 95°F) and object temperature above +0°C (+32°F)			
Spotmeter; area	Center spot; box with min./max.			
Emissivity table/correction	Emissivity table of predefined materials/variable from 0.1 to 1.0			
<b>Additional Data</b>				
File formats	Standard JPEG, 14-bit measurement data included			
Interfaces	USB Micro: Data transfer to and from PC and Mac device			
Battery type & operating time	Rechargeable 3.6 V Li ion battery; approx. 4 hours typical use			
Encapsulation/drop	IP 54 (IEC 60529)/2m (6.6 ft.)			
Camera weight, incl. battery	0.575 kg (1.27 lb.)			

Specifications are subject to change without notice. For the most up-to-date specifications, go to [www.flir.com](http://www.flir.com)



Download images fast via USB



Wireless Connectivity to Smartphones, Tablets and more.

**PORTLAND**  
Corporate Headquarters  
FLIR Systems, Inc.  
27700 SW Parkway Ave.  
Wilsonville, OR 97070  
PH: +1 866.477.3687

**NASHUA**  
FLIR Systems, Inc.  
9 Townsend West  
Nashua, NH 03063  
PH: +1 866.477.3687

**CANADA**  
FLIR Systems, Ltd.  
920 Sheldon Court  
Burlington, ON L7L 5K6  
Canada  
PH: +1 800.613.0507

**LATIN AMERICA**  
FLIR Systems Brasil  
Av. Antonio Bardella,  
320 Sorocaba,  
SP 18085-852  
Brasil  
PH: +55 15 3238 7080

**CHINA**  
FLIR Systems Co., Ltd  
Rm 1613-16, Tower II  
Grand Central Plaza 1  
38 Shatin Rural  
Committee Rd.  
Shatin, New Territories  
Hong Kong  
PH: +852 2792 8955

**BELGIUM**  
FLIR Systems  
Luxemburgstraat 2  
2321 Meer  
Belgium  
PH: +32 (0) 3665 5100

**UNITED KINGDOM**  
FLIR Systems UK  
2 Kings Hill Ave., Kings Hill  
West Malling, Kent  
ME19 4AQ  
United Kingdom  
PH +44 (0)1732 220 011

Equipment described herein may require US Government authorization for export purposes. Diversion contrary to US law is prohibited. Imagery for illustration purposes only. Specifications are subject to change without notice. ©2017 FLIR Systems, Inc. All rights reserved. (Updated Jan 24) 17-0072

[www.flir.com](http://www.flir.com)  
NASDAQ: FLIR